



DSD RUNT TUNE - RockShox Charger 1 Damper Introduction


Before you begin:

Installation of the RUNT and performing the custom tune of this damper requires advanced knowledge of suspension technology, service, and use of special tools. DSD recommends this service to be performed by a suspension professional. In order to tune this damper, you must already know how to properly disassemble, clean, and reassemble this damper.


DSD does not warrant or assume responsibility for damaged equipment due to improper installation, mis-use of tools, or use of tools not recommended by the original equipment manufacturer. In most cases, performing this modification will void the any warranty on the damper.

We shouldn't have to tell you, but wear safety glasses and gloves.

DSD Charger 1 Shim Kit

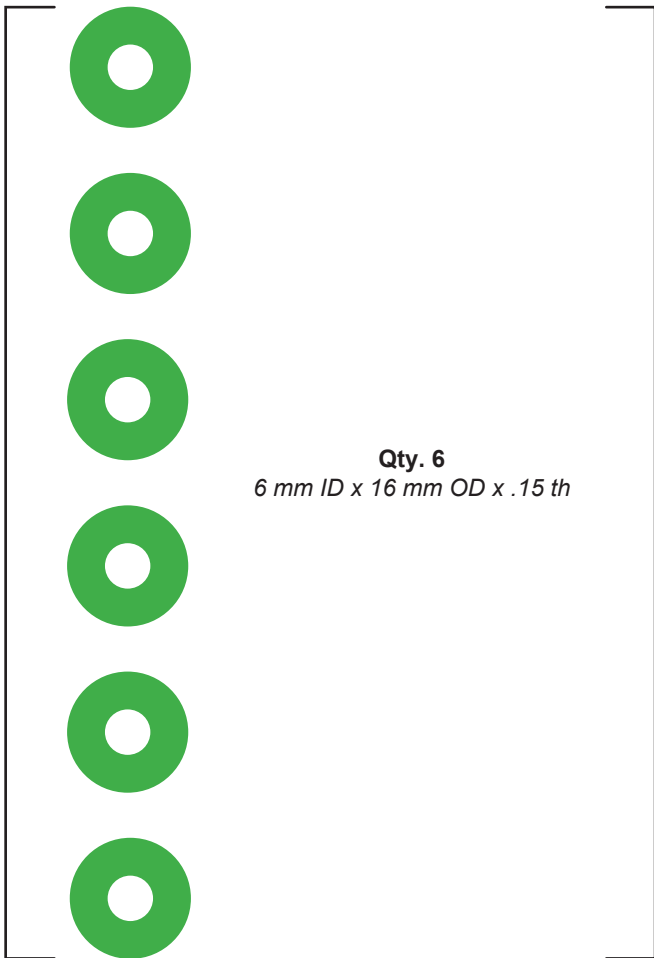

Qty. 6
6 mm ID x 16 mm OD x .15 th

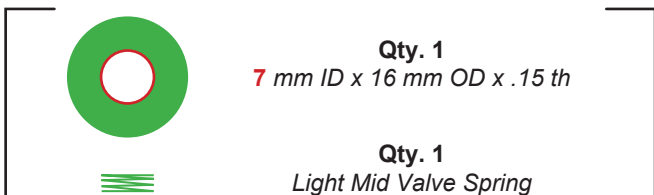

Qty. 1
7 mm ID x 16 mm OD x .15 th

Qty. 1
Light Mid Valve Spring

Rider Weight
(Lbs)

Number of Rebound Shims to Use

< 120
120 - 150
150 - 180
> 180

3			
	4		
		5	
			6

< 50 50 - 65 65 - 80 > 80

PSI

Current Fork Pressure or RUNT L Chamber Pressure




DSD RUNT TUNE - RockShox Charger 1 Damper

Part I: Mid Valve Tune

STOCK TUNE

RUNT TUNE

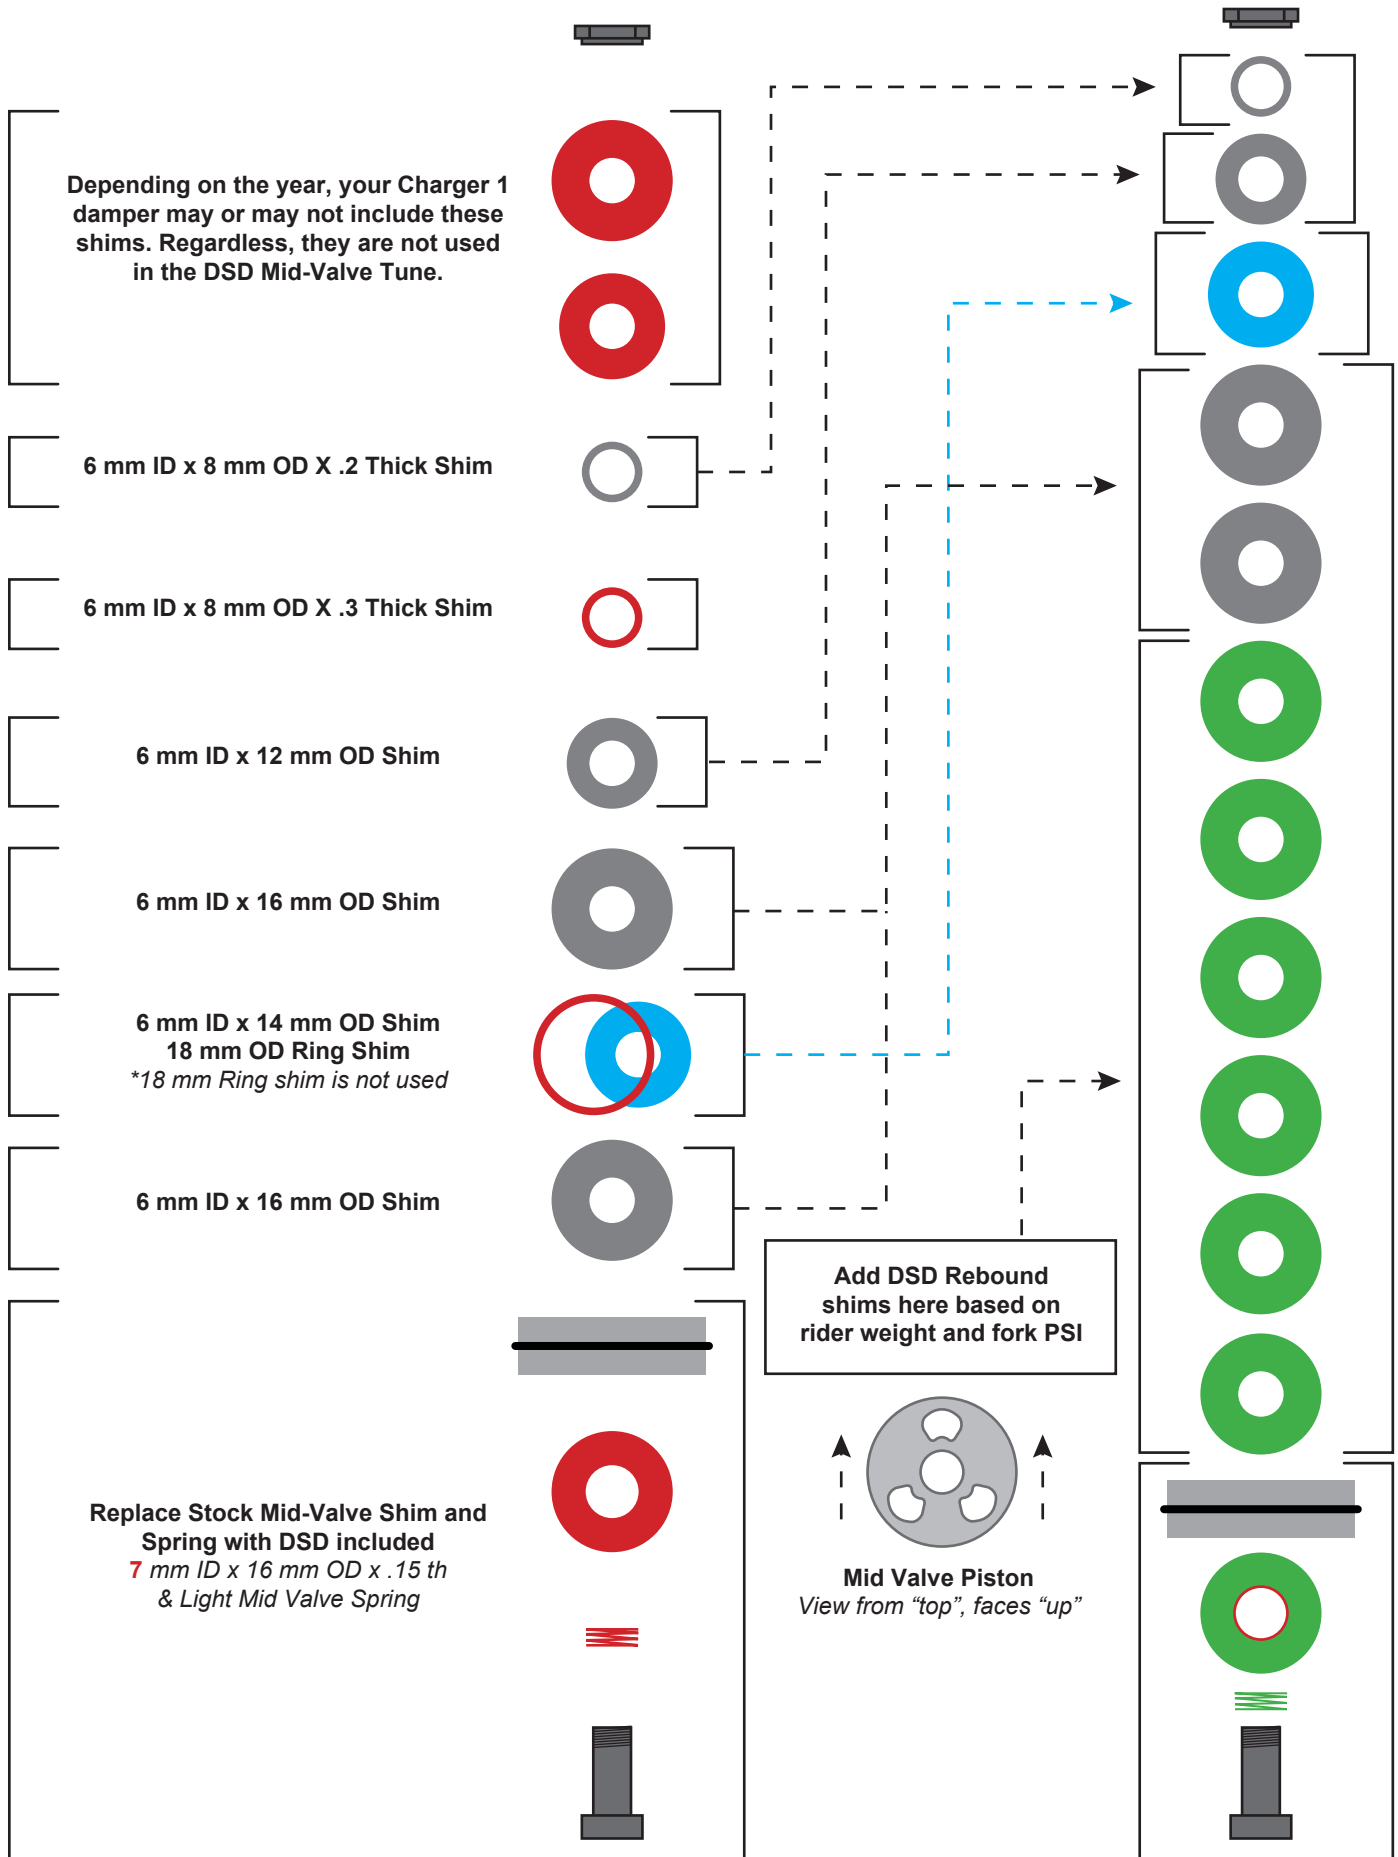



DSD RUNT TUNE - RockShox Charger 1 Damper

Part II: Base Valve Tune

